BELMONT 800, 845

Six-valve, plus rectifier, threewaveband superhet for use on AC or DC mains 110-220-260 volts. Visual tuner of the cathode-ray tube type and provision for a pickup. Marketed by British Belmont Radio, Ltd. Present service agents: Price & Co. (Manchester), Ltd., 78, Tib Street, Manchester, 4, and Shannons & Bishop, Ltd., 182, Wardour Street, London, W1.

SIGNALS from the aerial are fed via C1 to a switch which directs the signals either to the coupling coils, L3 (SW) and

AERIAL (TAN)

selectivity on the MW band, as L2 is | The second intermediate frequency and L8 (LW). They have individual control, R9. trimmers and are tuned by VC2 section valve. V1. which is AVC controlled.

(MW), T11 and C3 (LW). Series tracking is by C4 (SW), T10 (MW), T13 (LW).

R23 to the third grid of the mixer valve, control via C7. L5 (LW), or to the MW preselector VI, so that mixing takes place and the IF circuit L1 and L2. This gives additional signal is developed across the primary, connected across the pickup sockets, is L14, of the first IF transformer. The put across the grid and cathode of V4 so secondary, L15, of the IFT is connected that a separate volume control is necessary direct to the grid of the IF amplifier to vary the output from the pickup on valve, V3, and the "earthy" end of L15 gram. is taken to the AVC line.

VISUAL

31V R13 -20V R14

tuned by VC1 section of the triple-gang transformer, L16, L17, transfers the condenser. A winding L4 couples the signal from V3 to the diode of V4. the MW signal from L2 to the grid circuit double diode triode second detector and coil L7. The other grid coils are L6 (SW) | LF valve, the signal load being the volume

AVC is supplied by the DC potential of the gang condenser. The grid coils across R9 and passed via the decoupling feed directly into the grid of the mixer components, R8 and C5, to the grids of V1 and V3 and to the visual tuner. The A separate oscillator valve, V2, has second diode of V4 is not used, the diode tuned grid circuits L9, L11 and L12, with being earthed through C5. The triode inductive coupling on SW to L10 reaction portion of V4 is biased by connecting the coil and direct coupling on MW and grid through a grid stopper. R10. to a tapping on the bias potentiometer net-Parallel trimmers are T5 (SW). T7 work comprising L20, R13 and R14.

The cathode of V4 is connected to the junction of R13 and R14, where it gets The anode of V2 is fed via an HF choke approximately 2v negative biasing for the from the main HT positive line. The AVC delay load. The grid potential is grid condenser for V2 is C2, and the grid- about 3.2v negative, and the signal is leak R2. The grid is also connected via applied to the grid from the volume

On gram the resistance, R11, which is

. The LF output of V4 is resistance

BOTTOM VIEW OF

HTLINE

Top view of the chassis showing the positions of the valves and other main components. Some trimmers indicated here and others are shown on the underside layout on page viii.

capacity coupled by R18 and C9 to the grid of V5, which is one of the push-pull pentode output valves.

C8 is the anode to chassis HF bypass for V4. As no intervalve transformer is employed, a phase reversal circuit is used to couple the output of V4 to the grid of V6, the second pentode push-pull output valve.

L6 L7 25A6 1.8 L9 L10 25A6 LII LI2 607 CATHODE RAY 68V TUNING VOL TONE This phase reversal network comprises prising R16 and R17, decoupled by C10 C12 and R20 and the input circuit, com- and C11. The grid circuits of both valves are taken via R15 to the full negative end

WINDINGS Ohms | L

1			Omns	1		Onins ,
1 2 3 4 5 6 7 8 9			37 4 1 1 60 1 4 16	11 12 13 14 15 16 17 18 19 20	 	12 22 9 70 9 70
CC	DND	ENS	ERS			
C			Mfds	C		Mfds
1 2 3 4 5 6 7 8 9			.01 .00005 .00004 .003 .02 .00025 .01 .00025 .01 .25	11 12 13 14 15 16 17 18 19	 	.1 .01 .003 .01 .1 .26 .26 .01
	ESIS	TAN	ICES			
R			Ohms	R		Ohms
1 2 3 4 5 6 7 8 9 10 11			100,000 50,000 250 100 40 50,000 3 meg 1 meg 3 meg 100,000	13 14 15 16 17 18 19 20 21 22 23		20 50 250,000 250,000 75,000 150,000 500,000 10,000 300,000

of the bias potentiometer network, where they are given a negative potential of about 16 volts. A permanent tone correction circuit, C13 and R21, is connected across the

13 L4

anodes of V5 and V6, which are coupled to the primary, L18, of the output transformer. The centre tapping of the winding is connected to the HT line direct. as are the screening grids of V5 and V6.

A variable tone control is provided by C14 and R22, also across the primary winding, while the permanent magnet speaker is connected to the secondary, L19, of the output transformer. The supply circuit for HT and LT is quite standard, comprising the voltage dropping resistance, R3 and R4, with a shunt resistance, R5, for the two pilot lamps, The valve heaters are in series with these resistances across the mains, with a bypass condenser, C15, in shunt with the valve heaters. The HT supply circuit is connected on one side to the strapped anodes of the rectifier valve, V7, the cathode of which goes to the main HT feeder line.

Smoothing is in the negative HT line, and comprises the choke, L20, the reservoir condenser, C16, and smoothing condenser, C17. R13 and R14 complete the

ULTRA 55

Two-valve two-waveband TRF receiver for AC or DC mains: 200-250 volts, 25,100 cycles. Provision is made for an extra loudspeaker with a muting plug switch for the internal speaker. Released in 1935 by Ultra Electric, Ltd., Erskine Road, Chalk Farm, London.

the grid coils, L2 (MW) and L4 (LW), to the chassis through R1, R2 and R3

amplifier. The cathode is taken to the The output from V2 is coupled by the is shunted by the resistance, R3.

The output from the pentode section is R7 is an anode stopper, while the diagram indicating the posithe tuned grid circuit of the triode section direct. of V1 which operates as an anode bend detector. 1.6 is the medium wave coil. and L7 the long wave coil, both being tuned by VC2. C4 is the anode to earth bypass condenser, while C7 and L8 provide a fixed amount of reaction from the anode to the grid circuit of the triode section of V1.

The LF output of the triode section is THIS review applies to models with transformer-coupled by the intervalve serial numbers above 3,000. Alternatransformer, L9, L10, to the grid of the tive aerial inputs are via C1 for high output pentode, V2. This valve is biased selectivity and C2 for distant reception. by R6, which is connected between the The signals are fed to the coupling coils, cathode and the "earthy" end of L10 L1 and L3, which transfer the input to but it should be noted that R6 is returned These coils are tuned by VC1 section of thus the full amount of anode current in the double gang condenser. V1 is a both valves flows through the volume triode pentode valve, and the pentode control and provides a greater amount of length of 200 m.

Novel use is made of a triode pentode in this receiver. The pentode is an RF amplifier choke-coupled to the triode

which performs as an anode bend detector. C7 and L8 are a fixed reaction circuit.

HFC

GANGED VARIABLE CONDENSERS

section operates as a variable-mu HF | control than would otherwise be obtained.

chassis via R1, which gives fixed bias, and output transformer, L11, L12, to the R2, the volume control, which varies the energised loudspeaker. A permanent gain of the pentode section of V1. This amount of tone correction is effected by C12.

choke-capacity coupled by 1.5 and C8 to screen of V2 is fed from the HT line tions of most of the trimmers.

The HT supply circuit comprises the rectifying valve, V3, which operates as a half-wave rectifier with a voltage dropper, R8, between the mains supply and the anodes. HT smoothing is effected by the choke, L13, condenser C14, and the reservoir condenser C13. The loudspeaker field L14 is connected directly across the HT supply.

The heater circuit is supplied from the mains through the barretter, V4, so that no voltage adjustments are provided. C15 effects mains filtering.

GANGING

R6

It is only necessary to adjust the trimmers T1 and T2 in that order on a wave-

BELMONT 800, 845

Continued from page vi.


Simplified under-chassis Other trimmers, accessible from above, are shown in the diagram on page vi.

HT negative circuit to chassis, these resistances being the bias potentiometer already referred to. C18 is the chassis to earth isolating condenser.

GANGING

IF Circuits.—Switch to MW with volume control at max. and set tuned to 1,400 kc. Inject a 465 kc signal via a .1 mfd condenser to the control

grid cap of V3 and adjust T1 and T2. | grid of V1 and adjust T3 and T4 to

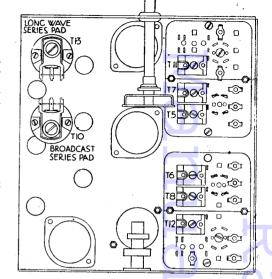

RESISTANCES

R	Ohms	R	Ohms
1 2 3 4 5	 80 10,000 330 150,000 40,000	6 7 8 9	 110 60 50 150

CONDENSERS

C	Mfds	C		Mfds
ī	 20 mmfd	9	 	_2
2 .	 1004	10	 	20
3	 .1	11	 	50
4	 .0003	12	 	.01
5	 .5	13	 	16
6	 .1	14	 	8
7	 .0001	15	 	.1
8	 10 mmfd	1		

VALVE READINGS

Type	Electrode	Volts	Ma
TP2620	Anode	190	3.7
	Triode anode	155	.4
	Screen	194	2.4
PEN3520	Anode	170	42
	Screen	194	8.2
U4020	Cathode	225	_
Philips C.1	Barretter.		
	TP2620 PEN3520 U4020	TP2620 Anode Triode anode Screen PEN3520 Anode Screen U4020 Cathode	TP2620 Anode 190

WINDINGS

L	Ohms		Ohms		
1	1.5	9	290		
2	4.7	10	2,500		
3	48.5	11	400		
4	11.3	12	Very low		
5	500	13	500		
6	4.7	14	9,000		
7	11.3	15	4.7		

Change service oscillator lead to control resonance as indicated on an output

Check T1 and T2 adjustments with signal still injected into V1.

SW Band.—Switch to SW and move gang to minimum capacity. Inject a 16.5 m signal via a dummy aerial (.lmfd cond. in series with a 20-ohm resistance) into the aerial and earth leads. Adjust T5 for maximum output.

Inject and tune-in a 17.6 m signal and adjust T6 for maximum output.

Check sensitivity at 50 m.

MW Band.—Switch to MW with gang at minimum capacity. Connect service oscillator to aerial and earth leads via dummy aerial (200 mmfd cond. and 20 ohm resistance in series).

Inject a 187 m signal and adjust T7 for maximum output.

Inject and tune in a 214 m signal and adjust T8 and then T9 to resonance. Inject and tune in 500 m signal and

adjust T10 while rocking gang.

Recheck all adjustments after LW ganging.

LW Band.—Switch to LW with gang at minimum capacity. Dummy aerial connected as for MW.

Inject a 860 m signal and adjust T11 to resonance.

Inject and tune in 925 m and adjust T12 for maximum output.

Inject and tune in a 2,000 m signal and adjust T13 while rocking gang. Recheck these adjustments after check-

ing MW trimmers.



二 C3

ത്ത

000

14

 \overline{m}